

OPERATION OF AIR CONDITIONER

■ Operation procedure-Control under the Remote controller

1 Run/Stop

- Press I/O button, start operation, and stop when repressed.

2 Temperature adjustment

- Press TEMPERATURE ADJUSTMENT button,decreases 1°C by press “▼” button once, and increase 1°C by press “▲” button once.
- Temperature change will display in the remote controller's display.

3 Fan speed adjustment

- Press FAN SPEED button,change the fan speed of indoor unit in the order of ■ (low) → ■■■ (medium) → ■■■■ (high) → @ (auto).

4 Sleep selection

- Press SLEEP button, set sleep operation, and cancel when repressed.

5 Air flow direction adjustment

- Changing up/down air flow direction

- 1 Press MANUAL SWING button, the deflector move a specific angle. Change the deflector of indoor unit follow the order of → (1) → ↙ (2) → ↘ (3) → ↗ (4) → ↓ (5) (Fig.2)

NOTICE In DRY or COOL mode , air blows downward in ↗ (4), ↓ (5) for one hour, it changes to horizontal blowing automatically to prevent dripping.

OPERATION OF AIR CONDITIONER

6 Operation mode adjustment

■ Cool only type has not HEAT mode .

1 AUTO mode

When started, operation mode will turn into COOL or DRY or HEAT mode as per room temperature, if operation stops for two hours, it restarts in the same mode set as before operation was stopped. Once operation mode is set, it will not be influenced even if room temperature has changed. Press MANUAL SWING button or SWING button to change up/down air flow direction.

Per Room Temperature (RT)	Cooling only type		Heat pump type	
	Mode	Per Setting Temperature	Mode	Per Setting Temperature
above 26 °C	Cool	24 °C	Cool	24 °C
25-26 °C		RT-2		RT-2
23-25 °C	Dry	RT-2	Dry	RT-2
below 23 °C			Heat	26 °C

2 COOL mode

Press MANUAL SWING button or SWING button to change up/down air flow direction. Press FAN SPEED button to change the fan speed of indoor unit. Press TEMPERATURE ADJUSTMENT button to change the setting temperature.

3 DRY mode

Press MANUAL SWING button or SWING button to change up/down air flow direction. Press FAN SPEED button to change the fan speed of indoor unit.

4 FAN mode

Press MANUAL SWING button or SWING button to change up/down air flow direction. Press FAN SPEED button to change the fan speed of indoor unit.

5 HEAT mode(heat pump type)

Press MANUAL SWING button or SWING button to change up/down air flow direction. Press FAN SPEED button to change the fan speed of indoor unit. Press TEMPERATURE ADJUSTMENT button to change the setting temperature.


ADVICE


- HEAT mode: Healthy warmth lies in the difference with outside temperature! The setting temperature for heating shall not be too different from outside temperature. Though it varies with area, set temperature to between 20 °C- 24 °C, Heating effect becomes inferior when ambient temperature is below 5 °C.

 
 


OPERATION OF AIR CONDITIONER


7 Timer operation

● Timer operation ON


1 Press button  when air conditioner stops , “ | ” of “ ⌚ ” flicker on the Remote Controller display.

Press button  when air conditioner operates , “ 0 ” of “ ⌚ ” flicker on the Remote Controller display.


2 Press button  or  to enter time setting . press button  or  one time, the timer will increase 1 hour, the time will display on remote controller .

3 Press button  to fix setting time . “ ” or “ 0 ” will be stop flicker on the Remote Controller display.

● Timer operation OFF


If you want timer operation goes off, press button  Until set time and “ ⌚ ” or “ ⌚ ” will disappear on the remote controller display.

NOTICE

- 1.If power sets off, time must be set again, otherwise, Timer operation is not right.
- 2.If the air conditioner has been in time on or time off, but you want change the time, you must cancel the primary condition then can set new time condition, otherwise, error will incur.
- 3.After having chosen the time mode, if you press the  once incautiously, the setting time will count time anew automatically as primary setting time, and the display time will not change. So if you want air conditioner operate as primary setting time, you must set time anew .


NAME OF PARTS

◆ REMOTE CONTROLLER

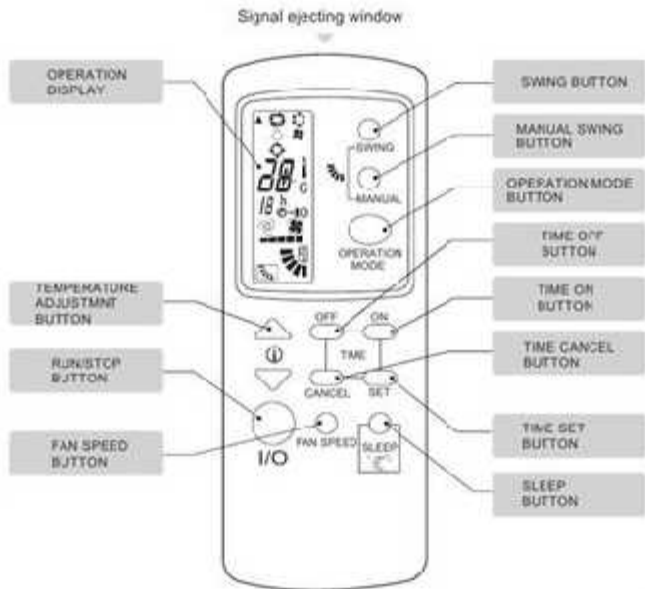

ADVICE

- ◆ In DRY or COOL mode, advise to make the Fan speed with (auto), air blows downward in - (1). In HEAT mode, advise to make the Fan speed with (auto), air blows downward in / (4).

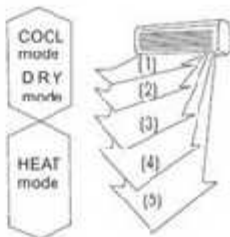

- ◆ Control with remote controller to adjust up/down air flow direction, avoid turning deflector with hand to avoid injury.